



HYDRAPAK RESERVOIR FLUSHING PROCEDURE

- 1) Remove reservoir drain plug to drain oil.
- 2) Remove oil filter.
- 3) Drain hydraulic hoses.
- 4) Replace drain plug.
- 5) Replace oil filter with new one.
- 6) Connect hydraulic hoses to each other and to HydraPak.
- 7) Refill reservoir with ISO VG 32 Hydraulic oil to 1" below top of tank.
- 8) Run HydraPak for 1 minute to fill hoses.
- 9) Turn HydraPak off and repeat step #7.
- 10) Run HydraPak for 15 minutes with hoses connected to unit.
- 11) Repeat steps #1, 2 & 3.
- 12) Repeat steps #4, 5 & 7.

Note: For greater than a 50' hose length recheck reservoir level again after an additional 1 minute of cycling.